ARAT Telephone mount

Type: VOLVO, 960 Model
(with Passenger airbag)

Part No: 1076.1

ARAT GmbH
Spezialhalterungen
für Autotelefone u.-Navigationssysteme

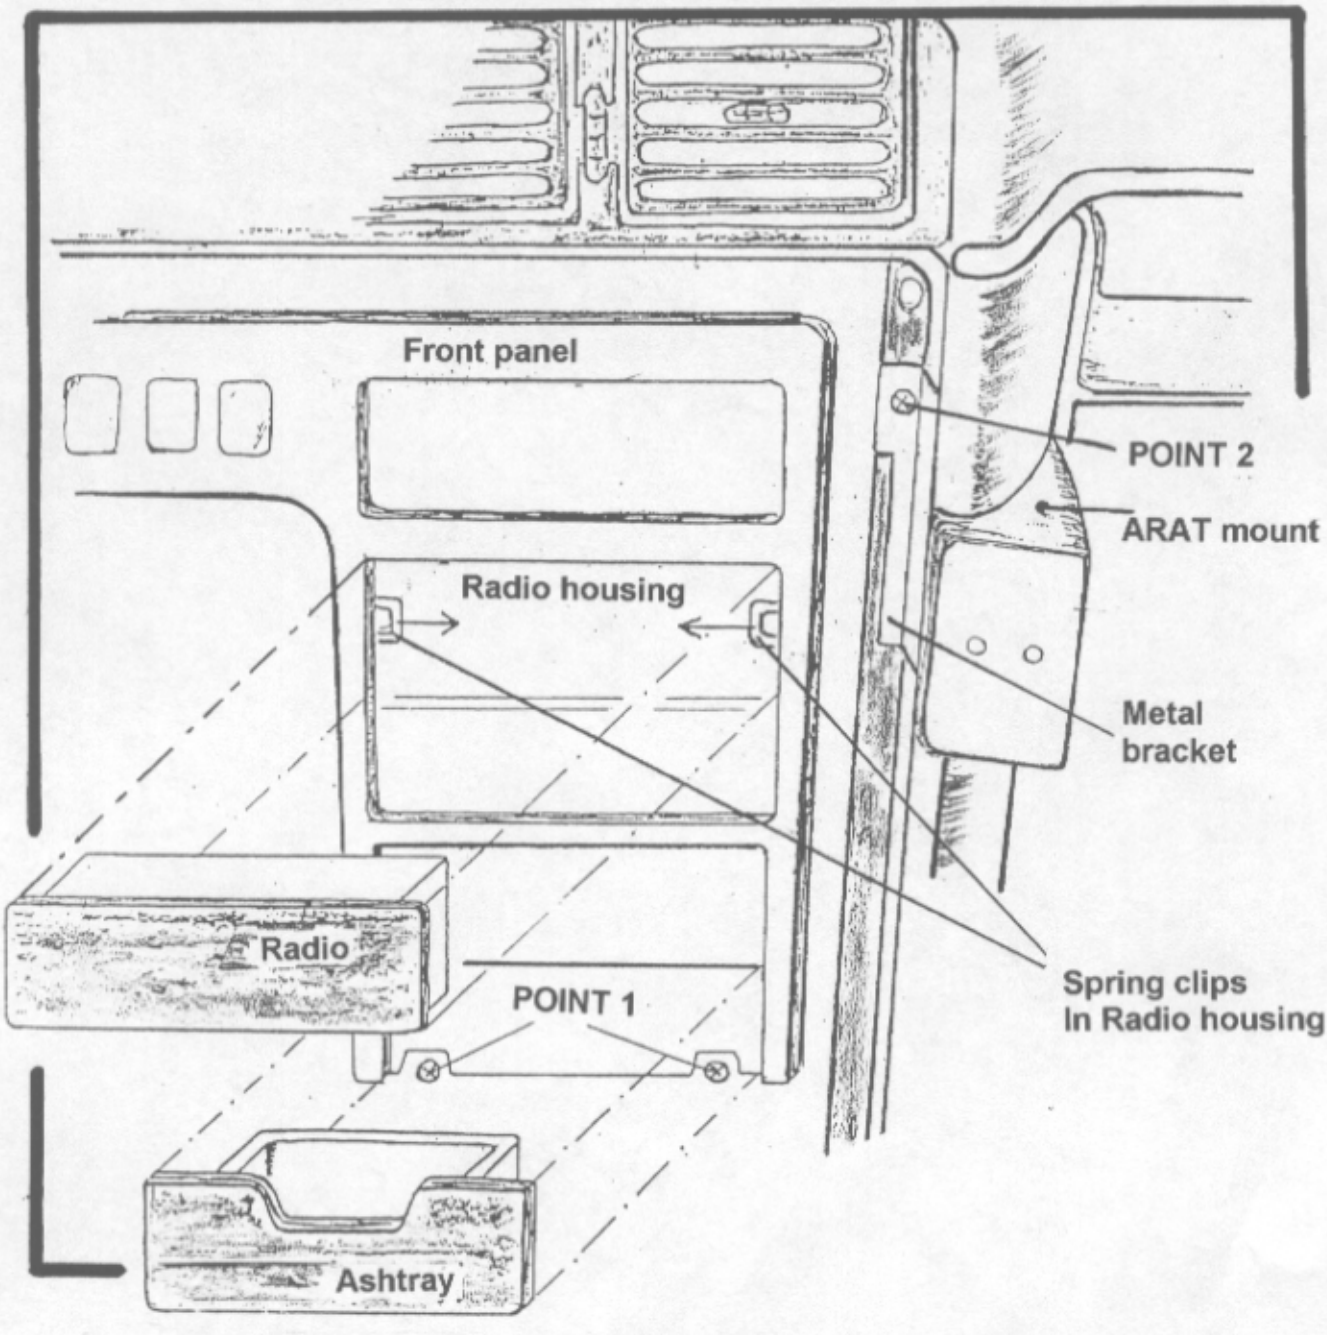

Installation instruction

1. Remove the radio and ashtray from their housings
2. Remove the screws (x2) at POINT 1
3. Press the spring clips, in the radio housing and pull the front panel approx 10 Cm forward
4. Remove the screw at POINT 2
5. Place the ARAT mount to the contours of the dashboard, and secure it through the metal bracket, with the screw at POINT 2
6. Replace the front panel press the panel back into the spring clips, and replace the screws at POINT 1, replace the ashtray and radio